




Installation Instruction of Full-extension Concealed Slide with Synchronized System Loading Capacity: 30 KG Side Board Thickness of drawer: ≤16, 18 mm Cabinet Drawing I Cabinet Drawing II DL: Drawer length CW NL: Nominal length DL=NL-10 Installion of soft closing slide DW 0000 27. Min. depth of cabinet=NL+5 DL=NL-10 Installation of push-open slide CW: Inner width of cabinet Gap between 0000 DW: Inner width of drawer front panel T: Thickness of side board & cabinet ≥4 DW For example Max. 4 $=CW-42^{0}_{-1.5}$ CW=564 and DW=522~523.5 =CW-46_{-1.5} Min. depth of cabinet=NL+5 18 CW=564 and DW=518~519.5 Installation of (NL) Front edge of cabinet DL=NL-10 Hole Position 270 Inner installation of Y=41+X push-open slide 00 0000 Notes: • suggested 300 0000 hole position 00 0000 350 Min. depth of cabinet=NL+5+X 400 Processing Drawing of Drawer 64 For clip-on slide only

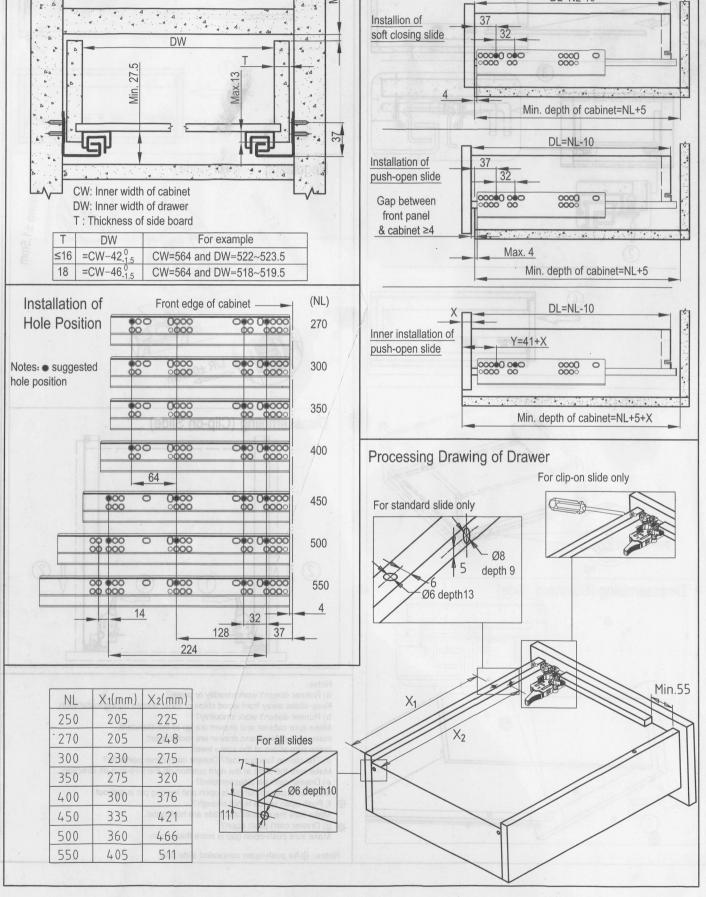

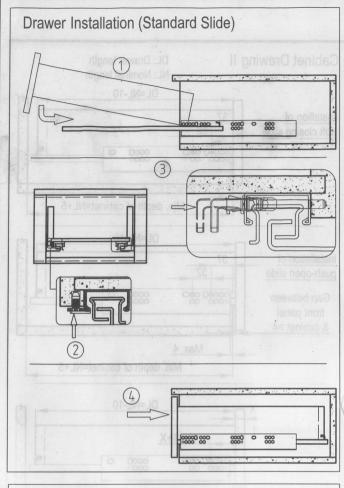

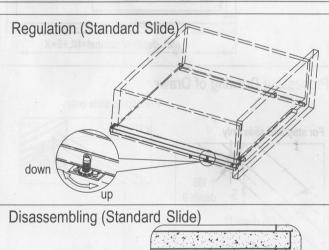

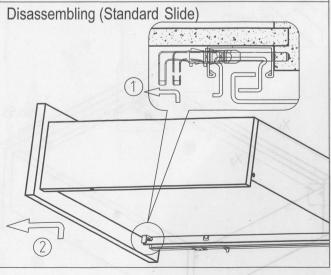

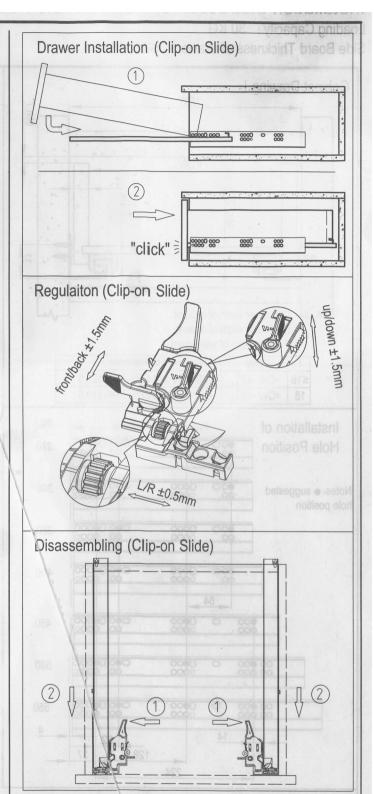

Notes.

- a) Runner doesn't work steadily or pulse?
- Keep slides away from wood chips or other scraps during installation.
- b) Runner doesn't work sinoothly?
- Make sure cabinet and drawer are up to the standard;
- make sure cabinet and drawer are up to the sta
- make sure slides at the same level;
- c) The clip-on function lost? Drawer can't close perfectly?
- Make sure the slide at the right position on the fore-and-aft direction;
- e) Drawer can't be disassembled?
- Make sure clip-on handle is open and locking pin is pull out.
- f) Push open space is not enough?
 - Make sure the cabinet and slide are horizontal.

 (g) Drawer can't push open?

 Make sure push-open gap is more than 4mm.

Notes: % for push-open concealed slide only.